


Honda Navi 110 Wire Diagram 2022 and Newer Models

NVA110B-N (A, AC, CM)


SWITCH CONTINUITY

ENGINE STOP SWITCH			STARTER SWITCH			IGNITION SWITCH		
OFF	BAT	IG	FREE	BAT	ST	ON	BAT 1	BAT 2
RUN	○	○	PUSH	○	○	OFF	○	○
COLOR	Bl/G	Bl/W	COLOR	G/Y	Y/G	COLOR	R/W	Bl

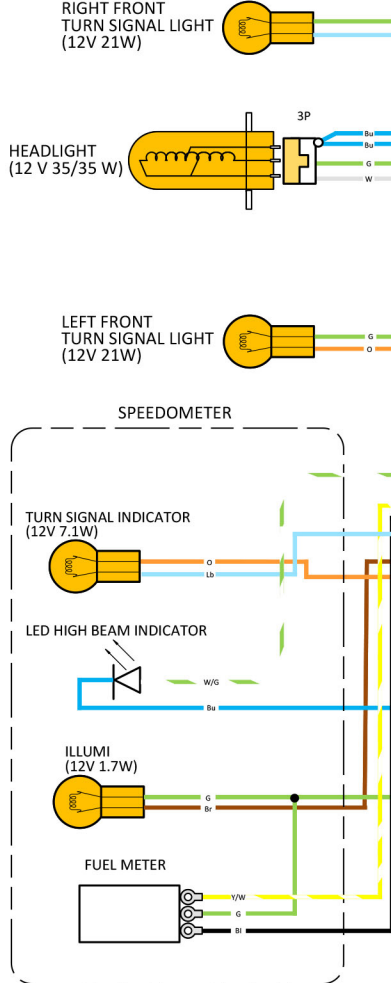

SWITCH CONTINUITY

HORN SWITCH			TURN SIGNAL SWITCH				DIMMER SWITCH			
FREE	BAT	HD	L	W	L	R	LO	HL	LO	HI
PUSH	○	○	N	○	○	○	(N)	○	○	○
COLOR	Bl	Lg	COLOR	Gr	O	Lb	COLOR	Br	W	Bu

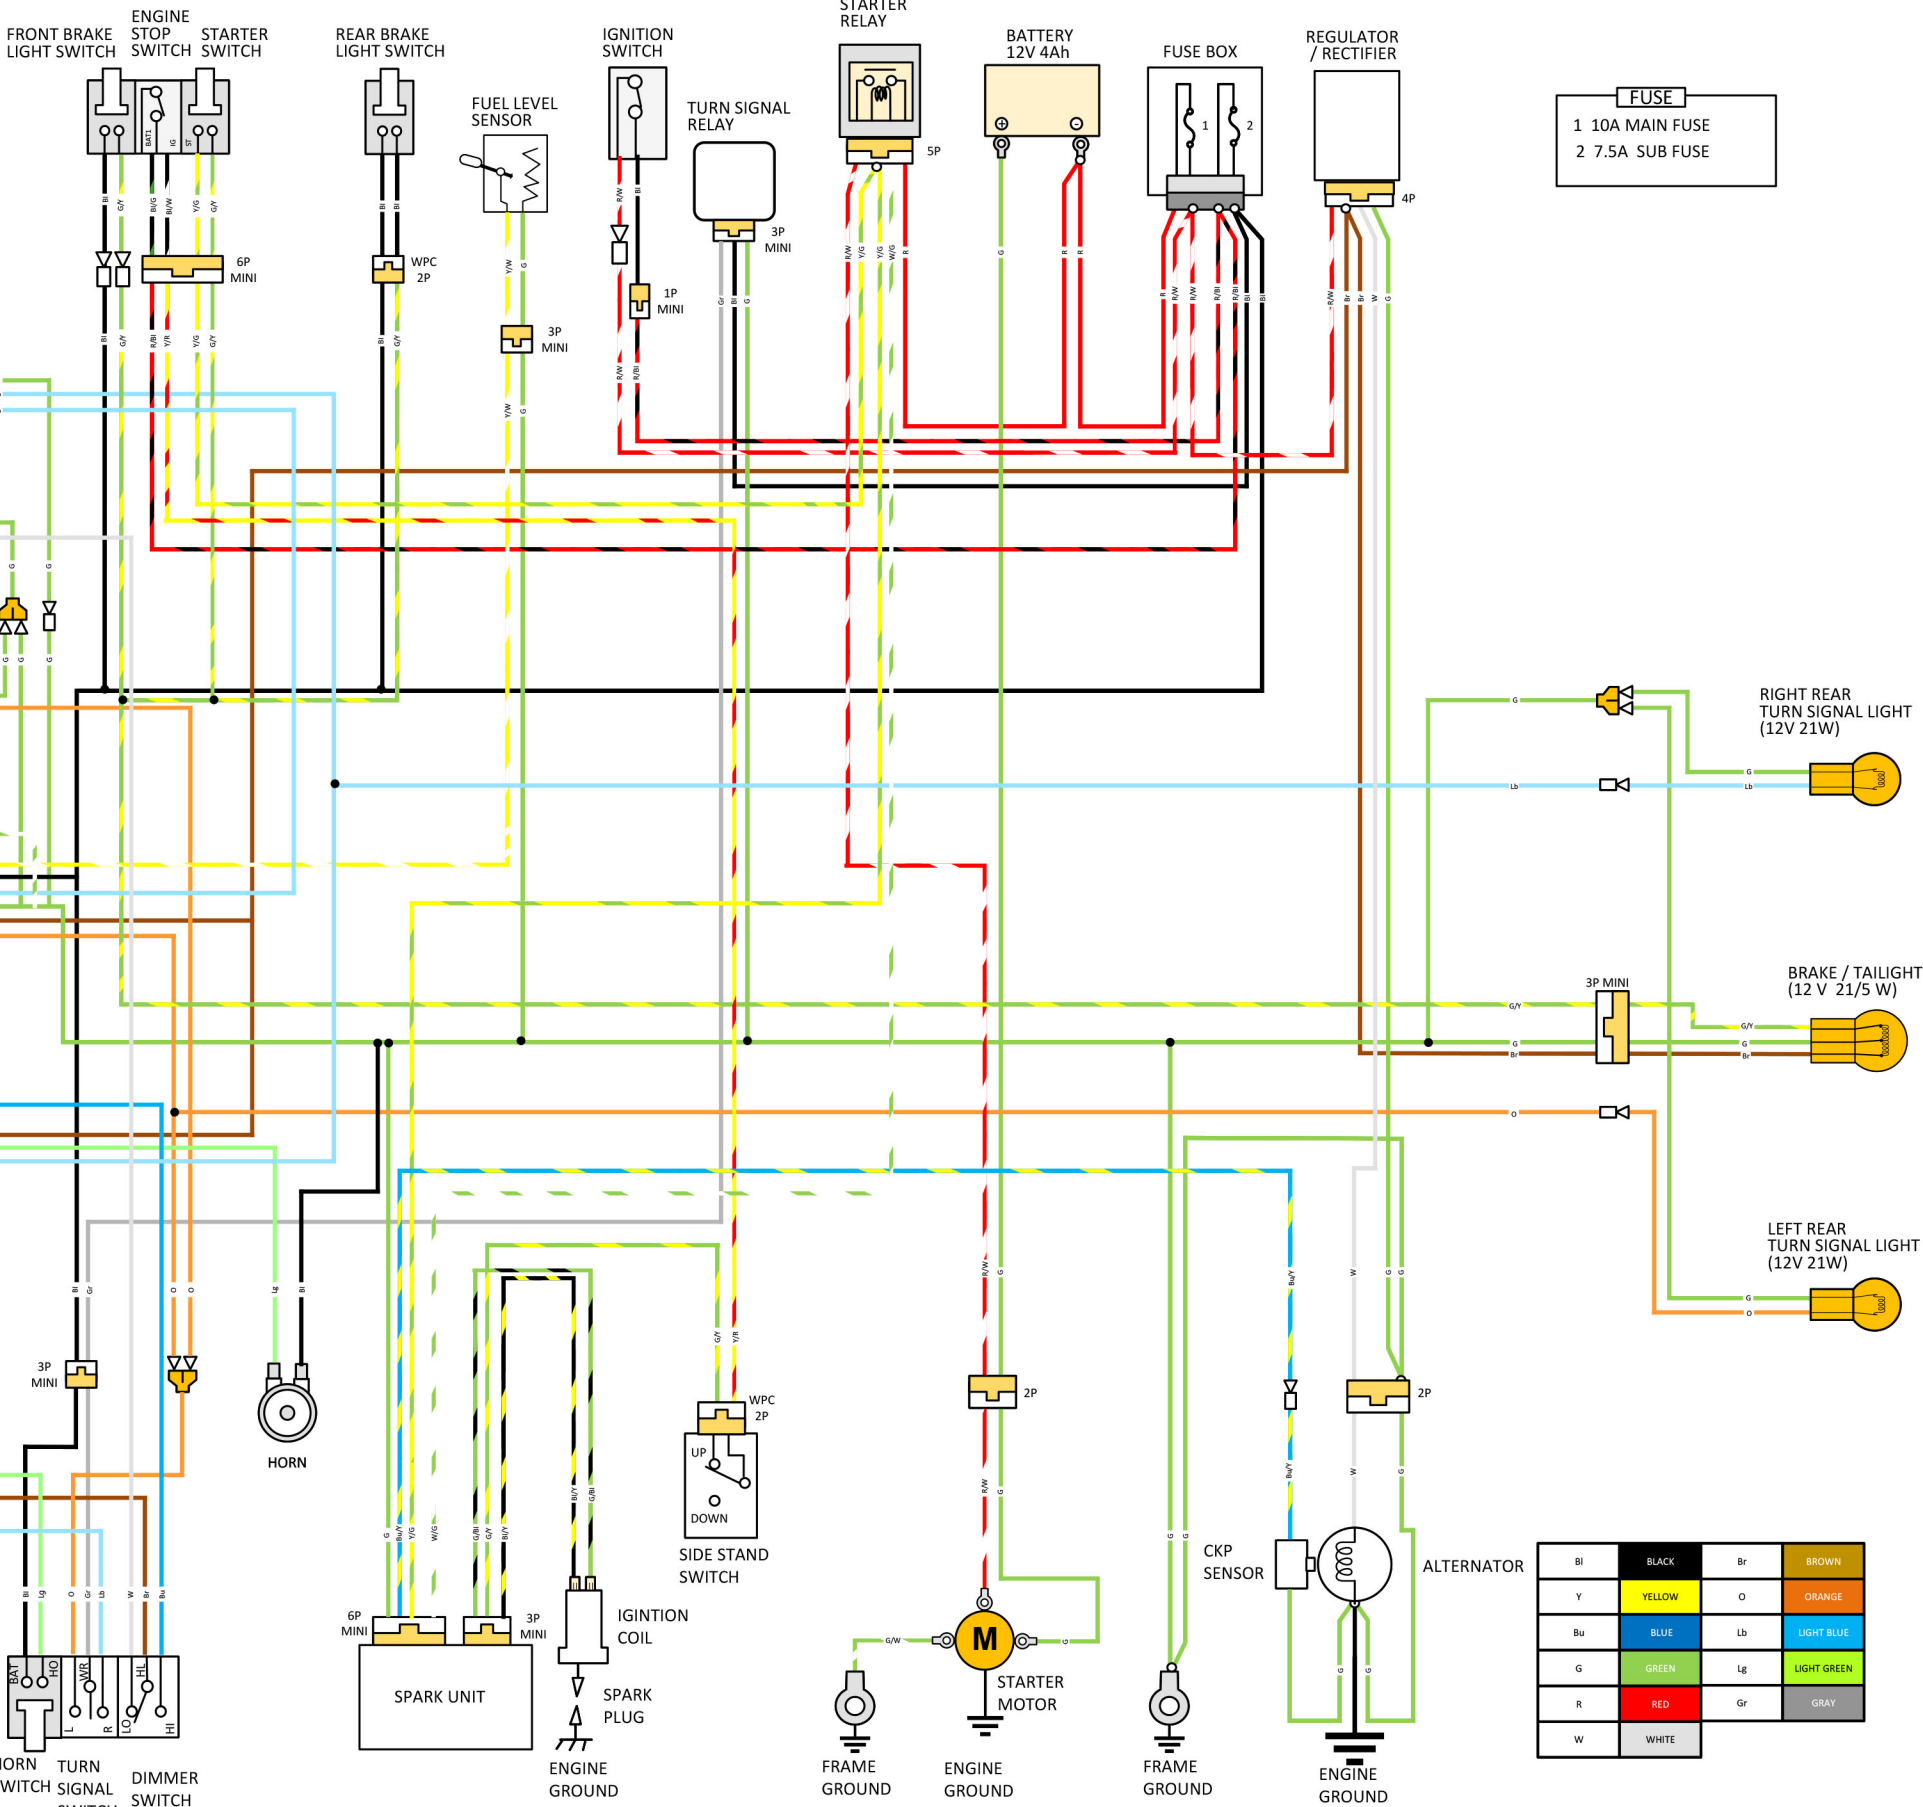

FUSE	
1	10A MAIN FUSE
2	7.5A SUB FUSE

Bl	BLACK	Br	BROWN
Y	YELLOW	O	ORANGE
Bu	BLUE	Lb	LIGHT BLUE
G	GREEN	Lg	LIGHT GREEN
R	RED	Gr	GRAY
W	WHITE		